


# CARCO®

## PARTS MANUAL MODEL 70A PS FOR CATERPILLAR D6H PS TRACTOR



### TABLE OF CONTENTS

	PAGE
Mounting Group .....	2
Control Group .....	4-5
Bevel Gear Group .....	6-7
Case and Covers .....	8-9
Clutch Shaft Group .....	10-11
Clutch Assembly .....	12
Brake Assembly .....	13
Manual Override (MOR) Brake Assembly .....	14-15
Idler Shaft Group — Without Freespool .....	16
Fourth Shaft Group .....	17
Idler Shaft Group — With Freespool .....	18-19
Drum Group .....	20-21
Hydraulic Control Group — Standard PTO .....	22-23
Pump Group and Accumulator .....	24
Control Valve .....	25
Control Stand .....	26
Fairlead .....	27

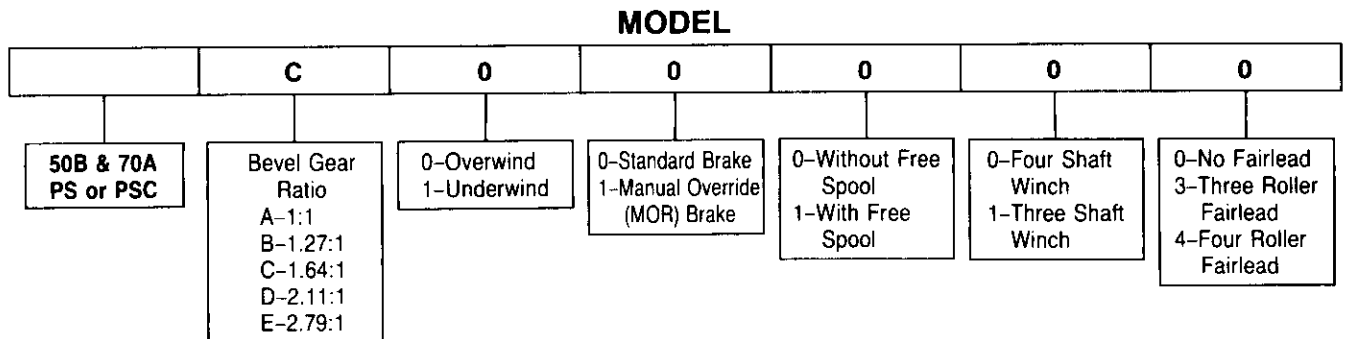


## **PACCAR WINCH DIVISIONS**

**MODEL 70A PS  
MOUNTING GROUP  
CATERPILLAR D6H PS**

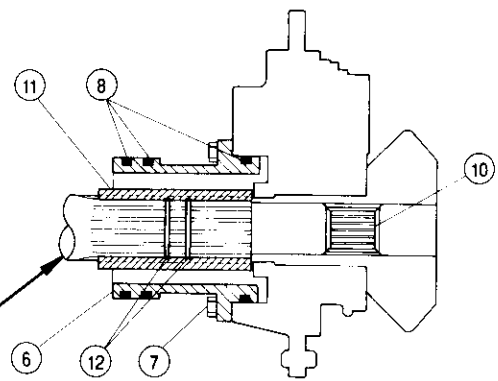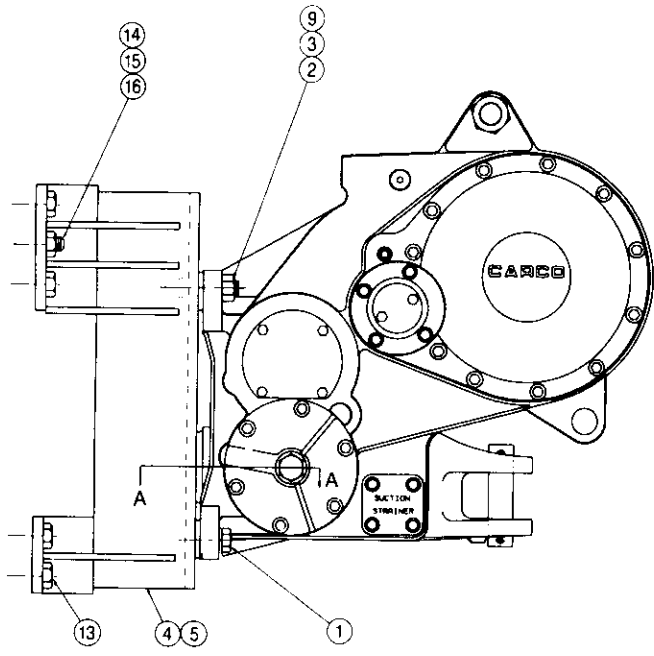

TRACTOR SHAFT (REF)

**SECTION A-A**

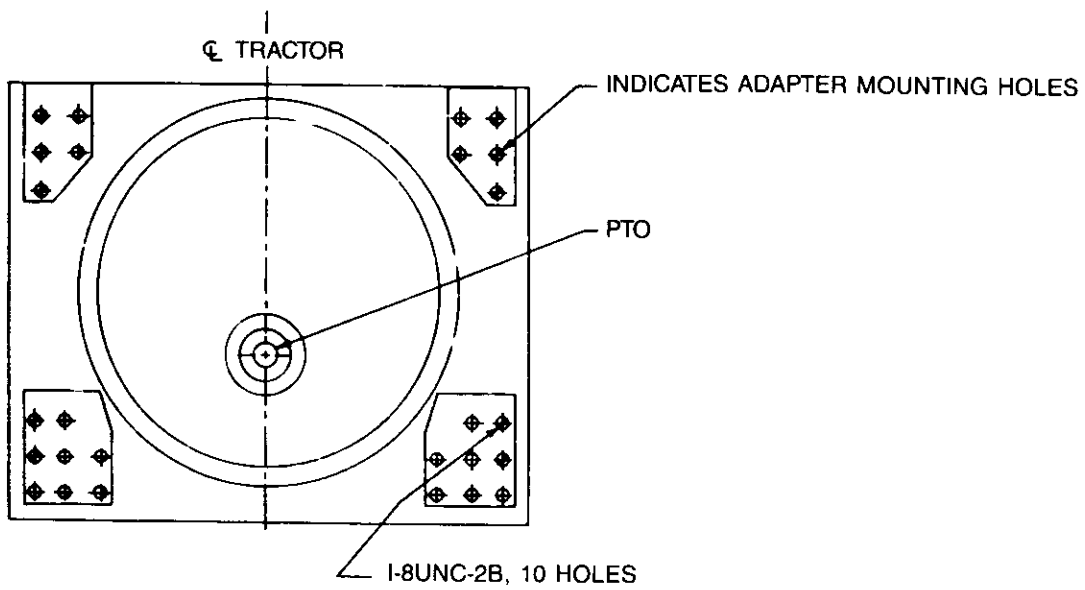

**VIEW OF TRACTOR REAR FACE**

## INSTRUCTIONS

1. PTO rotation is counterclockwise (CCW) as viewed from rear of tractor.
2. Remove and discard tractor PTO cover.
3. Remove paint, rust, dirt and grease from mounting surfaces of tractor, winch and winch adapters.
4. Apply Loc-tite 271 to threads and install studs, Item 16, to a height of 2 1/8 in. (54 mm) from tractor mounting surface.
5. Apply Loc-tite 271 to threads and install studs, Item 3, into winch adapter.
6. Apply Loc-tite 242 to threads of studs, Items 3 & 16 and capscrews, Items 1 & 13 and tighten as follows:
  - A) Nuts, Item 2, to be snugged up to approximately 100 lb-ft (136 Nm) then mark position of nut and tighten an additional 2 1/2 flats.
  - B) Capscrews, Items 1 & 13 and nuts, Item 15 to be tightened to 640 lb-ft (868 Nm) torque.
7. Coat splines of PTO shaft, Item 10, with multi-purpose grease and install into bevel pinion gear of winch.
8. Install retaining rings, Item 12, in coupling, Item 11. Place coupling over PTO shaft with beveled end away from winch.
9. Install o-rings, Item 8, onto PTO pilot Item 7. Note: As the same PTO pilot may be used on several adaptations, usually only one o-ring groove will engage and seal in the tractor PTO opening.
10. Remove winch top cover to gain access to the bevel gears.
11. Coat PTO pilot o-rings and splines of tractor PTO with multi-purpose grease, and install winch on tractor while moving winch bevel gears to align the splines.



### CAUTION

Fill winch to proper level with recommended oil **BEFORE** starting tractor. Bearing and gear damage may result if tractor or winch is run without oil.



ITEM	PART NO.	DESCRIPTION	QTY.
1	70749	CAPSCREW, HEX HEAD (1 - 8 x 2 3/4 G8)	4
2	70768	NUT, HEX HEAD (1 1/8 - 7)	4
3	27802	STUD, (1 1/8 - 7 x 4 1/4 G8)	4
4	27780	ADAPTER — RH	1
5	27781	ADAPTER — LH	1
6	69089	PILOT, PTO	1
7	22697	CAPSCREW, HEX HEAD (1/2 - 13 x 1 G5)	4
8	69850	O-RING	3
9	27803	WASHER (1 1/8 HARDENED)	4
10	26241	PTO SHAFT	1
11	69106	COUPLING	1
12	32101	RETAINING RING	2
13	70690	CAPSCREW	8
14	31251	WASHER (1)	2
15	22887	NUT (1 - 8)	2
16	33446	STUD (1 - 8 x 3 1/4 G8)	2

**MODEL 70A PS  
CONTROL GROUP  
CATERPILLAR D6H PS**

DIM.	WITH FREESPOOL	WITHOUT FREESPOOL
"A"	9.25 (235 mm)	9.75 (248 mm)
"B"	7.13 (181 mm)	6.13 (156 mm)

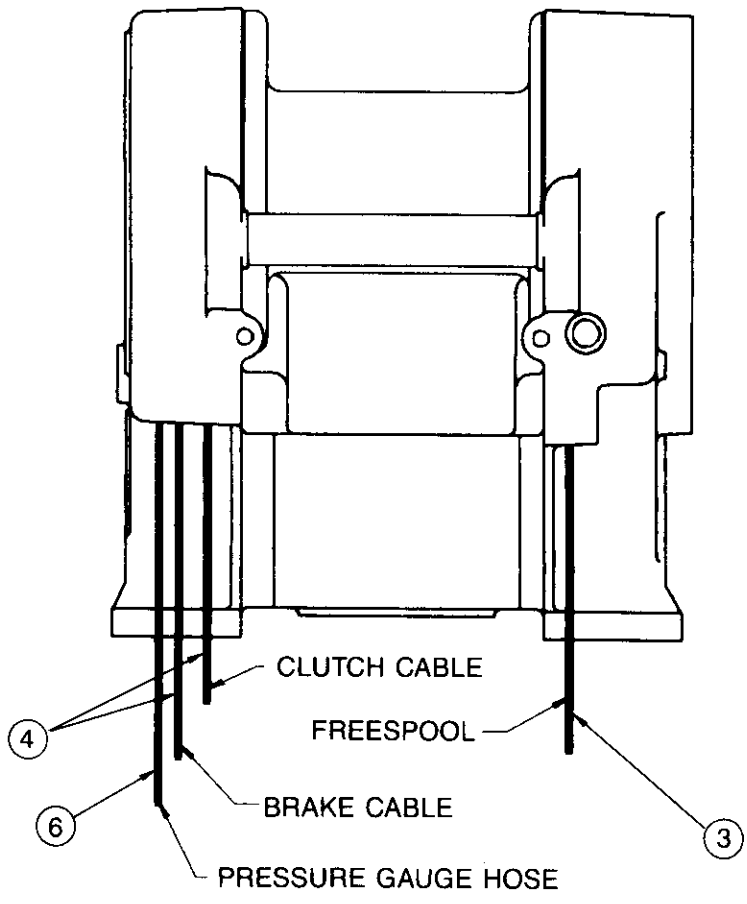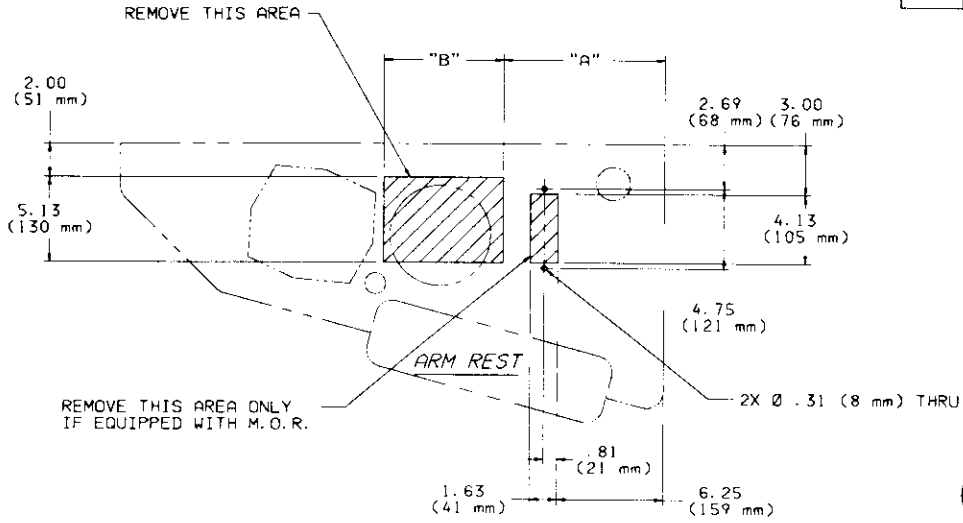

**TOP VIEW OF WINCH**

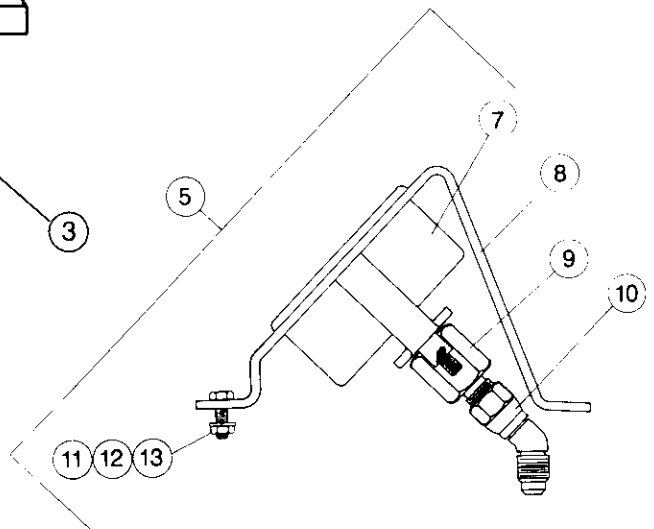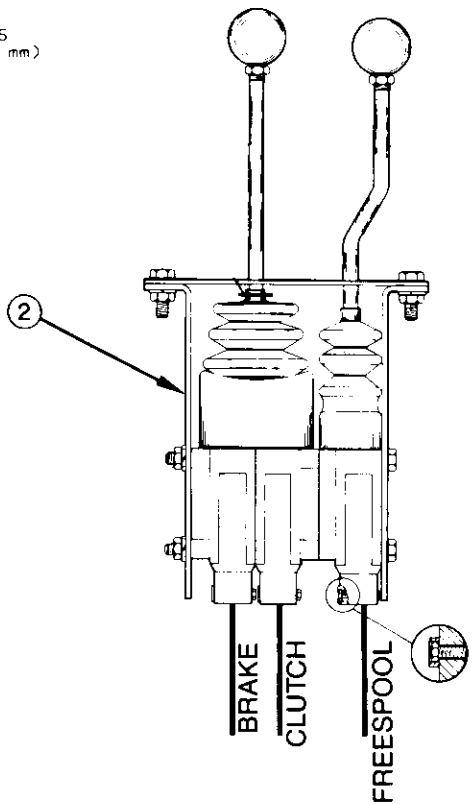

## CONTROL INSTALLATION INSTRUCTIONS:

**Note:** These instructions are provided as a general guide. Tractor options, application requirements or local regulations may require deviation from these recommendations.


1. Modify tractor right hand console and ripper control cover plate as shown.
2. Remove 1.63 × 4.13 in. (41 × 105 mm) shaded area **ONLY** if equipped with manual override, MOR, brake option.
3. Carefully route control cables, filter light wire, and pressure gauge hose from winch to underside of right hand console.
4. Pass cables up through control frame to control stand. Install cables to control stand as shown. Temporarily mount control stand in control frame. Position control frame in modified console such that the control cables will not interfere with any tractor control linkage, valves or tubes. Tack weld control frame to console.
5. Remove control stand from control frame. Finish welding control frame to console. Paint over welds as required.
6. Install filter indicator light assembly into control stand gate plate. Free end of wiring harness must be supplied with 12 to 24 volt-dc. The circuit is grounded through the filter bypass sending unit in the winch.
7. Refer to the MOR brake section, pages 14 and 15, of this manual for MOR piping instructions.
8. Securely install control stand into control frame. Secure cables, gauge hose and light wire with plastic tie straps as required to prevent chaffing.
9. Mount the pressure gauge in clear view of the operator.
10. Fill winch to proper level with recommended oil. Refer to oil specifications found on page 10 of the Operators Manual.
11. Verify proper control cable and pressure adjustment by following the procedures found on pages 8-10 of the Operators Manual.

### CAUTION

Avoid routing cables near moving shafts or linkage which may cause damage to cables or restrict free movement of tractor components.

ITEM	PART NO.	DESCRIPTION	QTY.
1	25696	CONTROL FRAME — WITH FREESPOOL	1
	28833	CONTROL FRAME — WITHOUT FREESPOOL	
2	69667	CONTROL STAND - WITH FREESPOOL	1
	81965	CONTROL STAND - WITHOUT FREESPOOL	
3	69799	CONTROL CABLE - 96 in. (2438 mm)	1
4	69800	CONTROL CABLE - 90 in. (2286 mm)	2
5	62058	PRESSURE GAUGE KIT (INCLUDES ITEMS 6-13)	1
6	34196	HOSE, GAUGE - 4, 96 in. (2438 mm)	1
7	27673	PRESSURE GAUGE	1
8	27651	BRACKET	1
9	27652	ADAPTER - 1/4 NPT - 4	1
10	70122	UNION 45° - 4	1
11	27683	CAPSCREW, HEX HEAD (5/16 - 18 × 1 1/4 G5)	2
12	69640	WASHER (5/16)	2
13	69644	NUT (5/16 - 18)	2

**MODEL 70A PS  
BEVEL GEAR GROUP  
CATERPILLAR D6H PS**

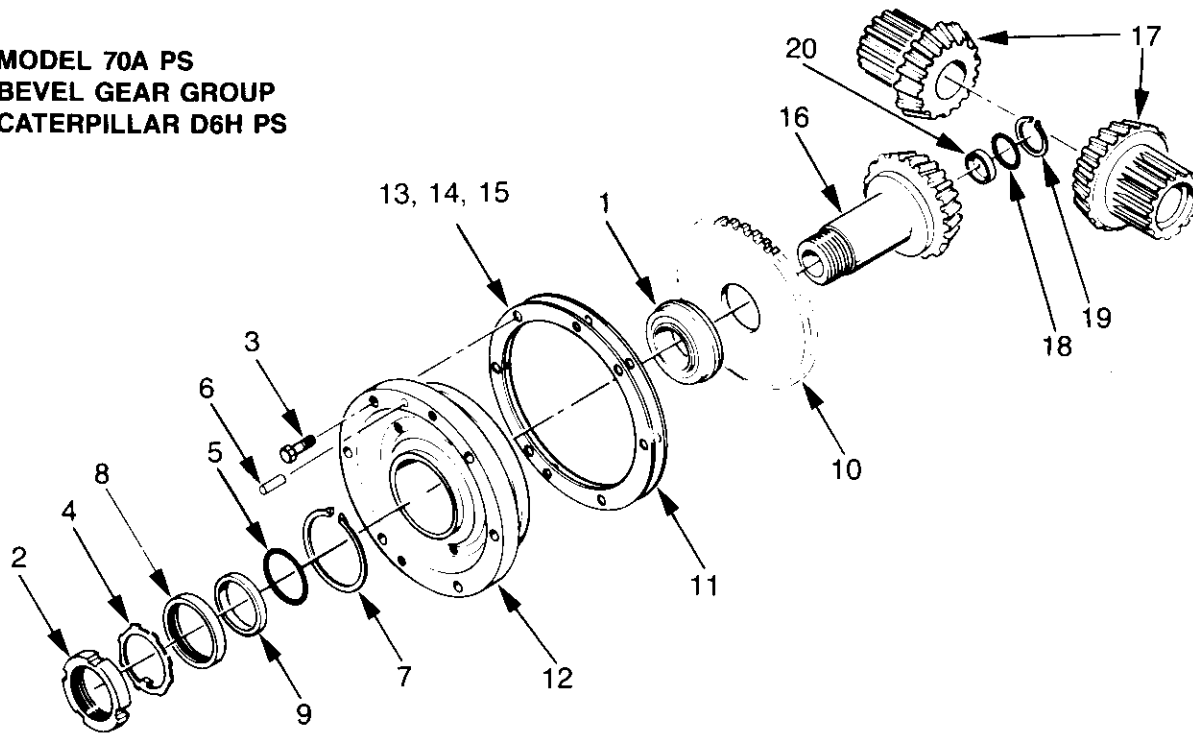

ITEM	PART NO.	DESCRIPTION	QTY.
1	70077	BEARING ASSEMBLY	1
2	24816	BEARING, LOCK NUT	1
3	22697	CAPSCREW HEX HEAD	6
4	11418	LOCKWASHER	1
5	74992	O-RING	1
6	10318	DOWEL PIN	1
7	70163	RETAINING RING	1
8	70168	OIL SEAL	1
9	70382	SEAL SPACER	1
10	69947	PUMP DRIVE PINION	1
11	69946	SHIM GASKET	1
12	69961	CARRIER	1
13	69945	SHIM .005"	2-AR
14	69827	SHIM .007"	2-AR
15	69826	SHIM .020"	2-AR
16	68424	BEVEL PINION - STANDARD SPEED	1
	69635	BEVEL PINION - SLOW SPEED	1
17	70350	BEVEL GEAR - STANDARD SPEED	2
	70353	BEVEL GEAR - SLOW SPEED	2
18	69813	O-RING	1
19	70162	RETAINING RING	1
20	70626	PLUG, BEVEL PINION	1

**BEVEL GEAR SET LISTINGS**

NOTE: The Bevel Gear Set above is standard for the adaption indicated. Below are gear combinations to provide a range of line speeds and pulls for various winching requirements. Important — Prior to ordering or quoting on any optional Bevel Gear Set be sure to check with factory on availability, and if the gear set would be recommended for the application.

BEVEL GEAR SET PART NO.	BEVEL GEAR		BEVEL PINION		RATIO		
	PART NO.	TEETH	PART NO.	TEETH	CODE	GEAR SET	OVERALL
69838	69821	30	69825	30	A	1:1	40.4:1
69837	70350	33	69824	26	B	1.27:1	51.4:1
69836	70351	36	69823	22	C	1.64:1	66.3:1
69835	70352	38	69822	18	D	2.11:1	85.3:1
69834	70353	39	69635	14	E	2.78:1	112.8:1

THIS PAGE INTENTIONALLY  
LEFT BLANK.





WINCH CASE & COVERS

ITEM	PART NO.	DESCRIPTION	QTY
1	22697	CAPSCREW, HEX HEAD (1/2 - 13 NC x 1 G5)	12
2	70053	DRIVE SCREW	4
3	70118	PLUG, DRAIN (MAY BE SUBSTITUTED FOR ITEM 7)	1
4	70119	PLUG, OIL FILL (INCLUDES ITEM 27)	1
5	22586	O-RING	1
6	11106	VENT PLUG	1
7	70193	SIGHT GAUGE (INCLUDES ITEM 28)	1
8	27752 27712	WINCH CASE - STANDARD PTO - SHOWN WINCH CASE - LOW PTO	1 1
9	69533	SERIAL NUMBER DATA PLATE	1
10	27805	COVER, TOP ACCESS	1
11	27806	GASKET	1
12	70305	STRAINER COVER	1
13	70505	CAUTION LABEL	1
14	69951	COVER, SIDE ACCESS	1
15	69950	GASKET	1
16	28772	TIE BOLT	1
17	27807	COVER, LOWER ACCESS	2
18	27808	GASKET	2
19	36618	DRAW BAR PIN	1
20	27804	SPACER TUBE	1
21	27666	LOCKWASHER, 1 3/4	1
22	27655	NUT, HEX HEAD (1 3/4 NC)	1
23	13708	ELBOW	1
24	27745	CAPSCREW, HEX HEAD (1/2 - 13 NC x 1 G5 SS)*	15
25	70148	COTTER PIN (3/8 x 3 in.)	2
26	70191	EXPANSION PLUG - 3 SHAFT WINCH ONLY	1
27	31608	O-RING - FOR OIL FILL PLUG	1
28	31607	O-RING - FOR OIL LEVEL & DRAIN PLUG	2

\*SS = SELF SEALING MATERIAL PREAPPLIED TO THREADS




## CLUTCH SHAFT GROUP

ITEM	PART NO.	DESCRIPTION	QTY
1	31608	O-RING (PART OF ITEM 14)	2
2	18049	BEARING CUP	1
3	70073	BALL BEARING — STD PTO	2
	70074	BALL BEARING, SHIELDED — LOW PTO	2
4	70075	BEARING CUP	1
5	70076	BEARING CONE	1
6	70083	NEEDLE BEARING — INNER RACE	4
7	11891	THRUST BEARING	2
8	70084	NEEDLE BEARING	4
9	18048	BEARING CONE	1
10	22697	CAPSCREW, HEX HEAD (1/2 - 13 NC x 1 G5)	6
11	24710	CAPSCREW, HEX HEAD (1/2 - 13 NC x 3 G5)	6
12	69997	CLUTCH SHAFT — 4 SHAFT WINCH	1
13	11892	THRUST BEARING RACE	4
14	70119	PLUG (CONTAINS ITEM 1)	2
15	70120	PLUG (1/4 NPT)	1
16	72097	O-RING	8
17	18170	O-RING	2
18	21833	O-RING	2
19	25023	O-RING	4
20	70158	RETAINING RING	2
21	70160	RETAINING RING	2
22	70361	BEARING RETAINER	2
23	25024	BACK-UP RING	4
24	70364	ROTARY SEAL SHAFT	2
25	70379	THRUST BEARING SPACER	2
26	70333	BACK-UP WASHER	2
27	70334	ROTARY SEAL	2
28	69991	PINION GEAR — 18 TEETH - 4 SHAFT WINCH	1
29	70292	BRAKE HUB	1
30	69690	BEVEL GEAR SPACER	2
31	70376	BEARING CARRIER	2
32	69983	PINION SPACER — 4 SHAFT WINCH	1
33	70247	SHIM SET	1
34	27844	SHIM .005	AR
	27845	SHIM .007	AR
	27846	SHIM .020	AR
35	27850	CLUTCH SHAFT BRG. CARRIER — 4 SHAFT WINCH	1
36	69045	BRAKE HUB SPACER	1
37	70332	SPRING	1
38	75267	ROLLPIN	2
39	70358	SLEEVE	4

AR — AS REQUIRED


# CLUTCH ASSEMBLY

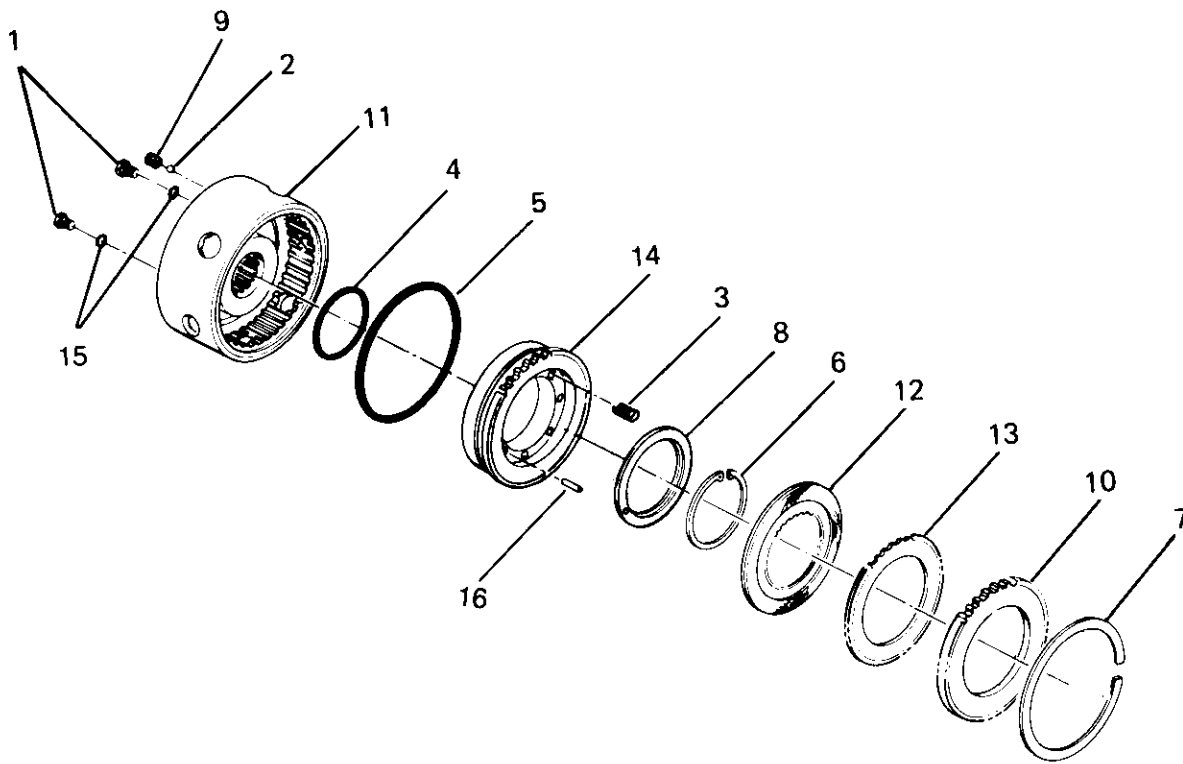

ITEM	PART NO.	DESCRIPTION	QTY
—	81968	CLUTCH ASSEMBLY — INCLUDES ITEMS 1-16	
1	70177	PLUG, O-RING FLUSH — INCLUDES ITEM 15	2
2	70126	STEEL BALL	1
3	70130	SPRING	8
4	77367	O-RING	1
5	22357	O-RING	1
6	70170	RETAINING RING	1
7	26147	RETAINING RING	1
8	70328	SPRING RETAINER	1
9	70241	CHECK VALVE SEAT	1
10	26755	PRESSURE PLATE	1
11	28866*	CLUTCH HOUSING	1
12	70636	DISC — FRICTION, BRONZE	5
13	27861	DISC — STEEL .093 in. (2.36 mm)	4
14	70306	CLUTCH PISTON	1
15	70724	O-RING	2
16	70862	PIN	1

\*Part No. 28866 includes Housing 70299 with two (2) steel balls 70126 driven into drilled passages.

**BRAKE ASSEMBLY - STANDARD**

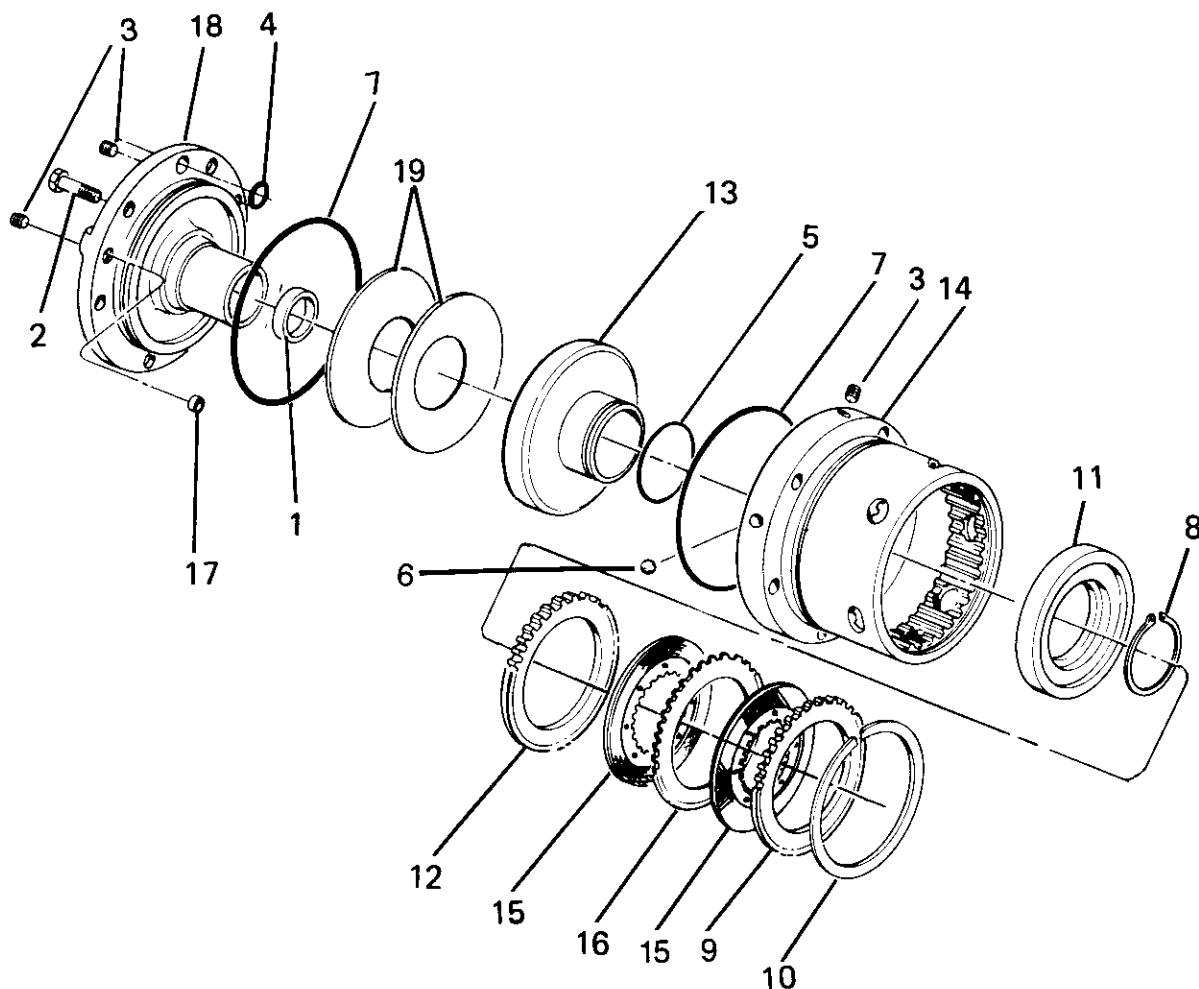


ITEM	PART NO.	DESCRIPTION	QTY
—	81960	BRAKE ASSEMBLY, STD — INCLUDES ITEMS 1-20	
1	18049	BEARING CUP	1
2	21961	CAPSCREW, HEX HEAD (3/8 - 16 NC × 1 G5)	2
3	70120	PLUG, HEX SOCKET (1/4 NPT)	4
4	22454	O-RING	3
5	10330	O-RING	1
6	70126	STEEL BALL	2
7	22358	O-RING	2
8	69807	RETAINING RING	1
9	26755	PRESSURE PLATE — OUTER	1
10	26147	RETAINING RING	1
11	69976	PISTON RETAINER	1
12	70293	PRESSURE PLATE — INNER	1
13	69921	BRAKE PISTON	1
14	27841	BRAKE HOUSING (REQUIRES 2 OF ITEM 6)	1
15	70636	DISC — FRICTION BRONZE	8
16	27861	DISC STEEL — .093 in. (2.36 mm)	7
17	27843	INSERT	1
18	69994	BRAKE CARRIER	1
19	70255	BRAKE SPRING	2



**MANUAL OVERRIDE (MOR)  
BRAKE ASSEMBLY**

ITEM	PART NO.	DESCRIPTION	QTY
—	81961	BRAKE ASSEMBLY, MOR — INCLUDES ITEMS 1-23	
1	18049	BEARING CUP	1
2	21961	CAPSCREW, HEX HEAD	2
3	70120	PLUG, HEX SOCKET	3
4	22454	O-RING	3
5	10330	O-RING	2
6	12102	STEEL BALL	1
7	22358	O-RING	2
8	69807	RETAINING RING	1
9	26755	PRESSURE PLATE — OUTER	1
10	26147	RETAINING RING	1
11	69925	OVERRIDE PISTON	1
12	70293	PRESSURE PLATE — INNER	1
13	69921	BRAKE PISTON	1
14	27841	BRAKE HOUSING	1
15	70636	DISC — FRICTION BRONZE	8
16	27861	DISC — STEEL - .093 in. (2.36 mm)	7
17	27842	BALL GUIDE	2
18	69994	BEARING CARRIER	1
19	70255	BRAKE SPRING	2
20	70126	STEEL BALL	2
21	10450	O-RING	1
22	69924	SPRING RETAINER	1
23	69627	SPRING	6
24	69317	HOSE GUARD	1
25	69511	CONTROL VALVE (DOES NOT INCLUDE HANDLE)	1
26	26691	HANDLE	1
27	26692	BOOT	1
28	26002	SWIVEL TEE	1
29	70123	UNION 90° - 4	1
30	11073	WASHER	4
31	69513	DATA PLATE	1
32	11047	CAPSCREW, HEX HEAD	2
33	31348	ELBOW — 90° VALVE D PORT	1
34	70194	HOSE ASSEMBLY — PRESSURE	3
35	69499	HOSE ASSEMBLY — DRAIN	1
36	31286	ADAPTER VALVE C PORT	1
37	31426	UNION, 90° MALE VALVE C PORT	1
38	31284	ADAPTER	2
39	31333	ELBOW, 45° ¼ NPT - 4	1
40	31341	ELBOW, 90° ¼ NPT - 4	1
41	31335	ELBOW, 45° ¾ NPT - 6	1


**IDLER SHAFT GROUP  
WITHOUT FREESPOOL**

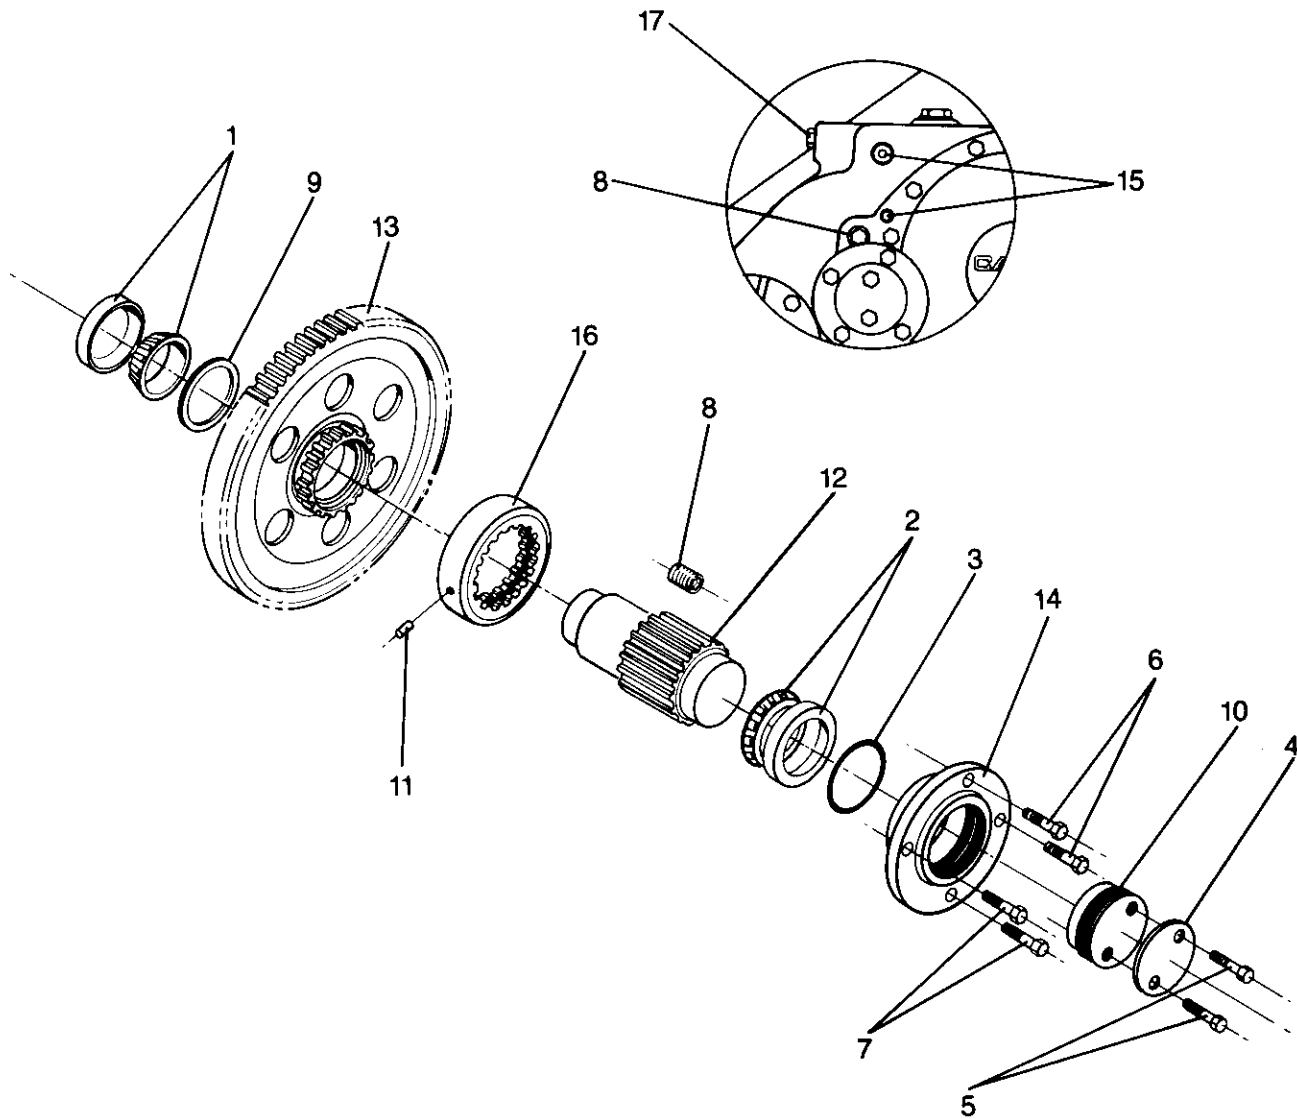

ITEM	PART NO.	DESCRIPTION	QTY.
1	69013	BEARING ASSEMBLY — INNER	1
2	69014	BEARING ASSEMBLY — OUTER	1
3	25880	O-RING	1
4	69655	LOCK PLATE	1
5	22729	CAPSCREW, HEX HEAD (1/2 - 13 x 3/4 G5)	2
6	22697	CAPSCREW, HEX HEAD (1/2 - 13 x 1 G5)	2
7	13421	CAPSCREW, HEX HEAD (1/2 - 13 x 2 G5)	2
8	27216	PLUG, SOCKET HEAD	1
9	11892	THRUST WASHER	1
10	69592	ADJUSTER	1
11	11836	ROLLPIN	1
12	69984	PINION, SECOND REDUCTION	1
13	27320	GEAR, FIRST REDUCTION	1
14	69974	CARRIER, IDLER SHAFT	1
15	25915	SCREW, SOCKET HEAD	2
16	69977	COLLAR	1
17	69782	CAPSCREW HEX HEAD (3/4 - 16 x 1 1/4 G5)	1



FOURTH SHAFT GROUP

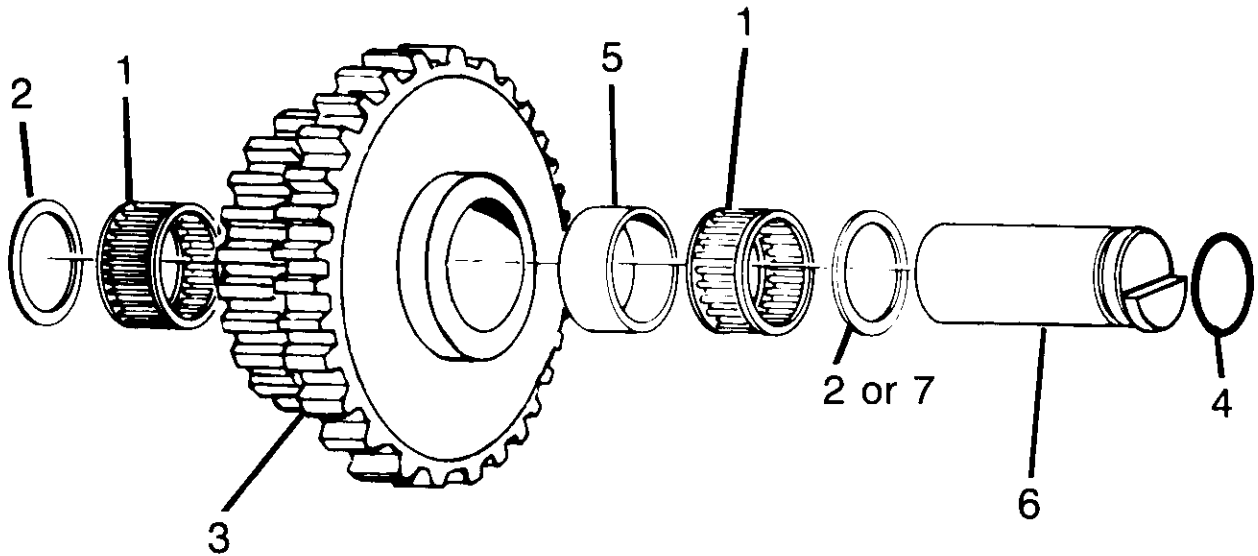

FOR WINCH SERIAL NO. 9002141 TO 9002160 AND 9004003 AND UP.


ITEM	PART NO.	DESCRIPTION	QTY
1	70648	ROLLER BEARING	2
2	24581	THRUST WASHER .062 in. (1.58 mm)	1
3	28925	CLUSTER GEAR 37/17 TEETH	1
4	13838	O-RING	1
5	28926	SPACER	1
6	69673	COUNTERSHAFT PIN	1
7	28924	THRUST WASHER .217 in. (5.5 mm)	1

FOR WINCH SERIAL NO. BUILT PRIOR TO 9004003, EXCEPT 9002141 TO 9002160.

ITEM	PART NO.	DESCRIPTION	QTY
1	70648	ROLLER BEARING	2
2	24581	THRUST WASHER .062 in. (1.58 mm)	2
3	69985	CLUSTER GEAR 37/17 TEETH **	1
4	13838	O-RING	1
5	70342	SPACER	1
6	69673	COUNTERSHAFT PIN	1

\*\*IF REPLACING CLUSTER GEAR 69985 ON EARLY MODEL 70 or 70A, ORDER QTY. 1 OF 28925 CLUSTER GEAR, QTY. 1 OF 28926 SPACER AND QTY. 1 OF 28924 THRUST WASHER.


**IDLER SHAFT GROUP  
WITH FREESPOOL**

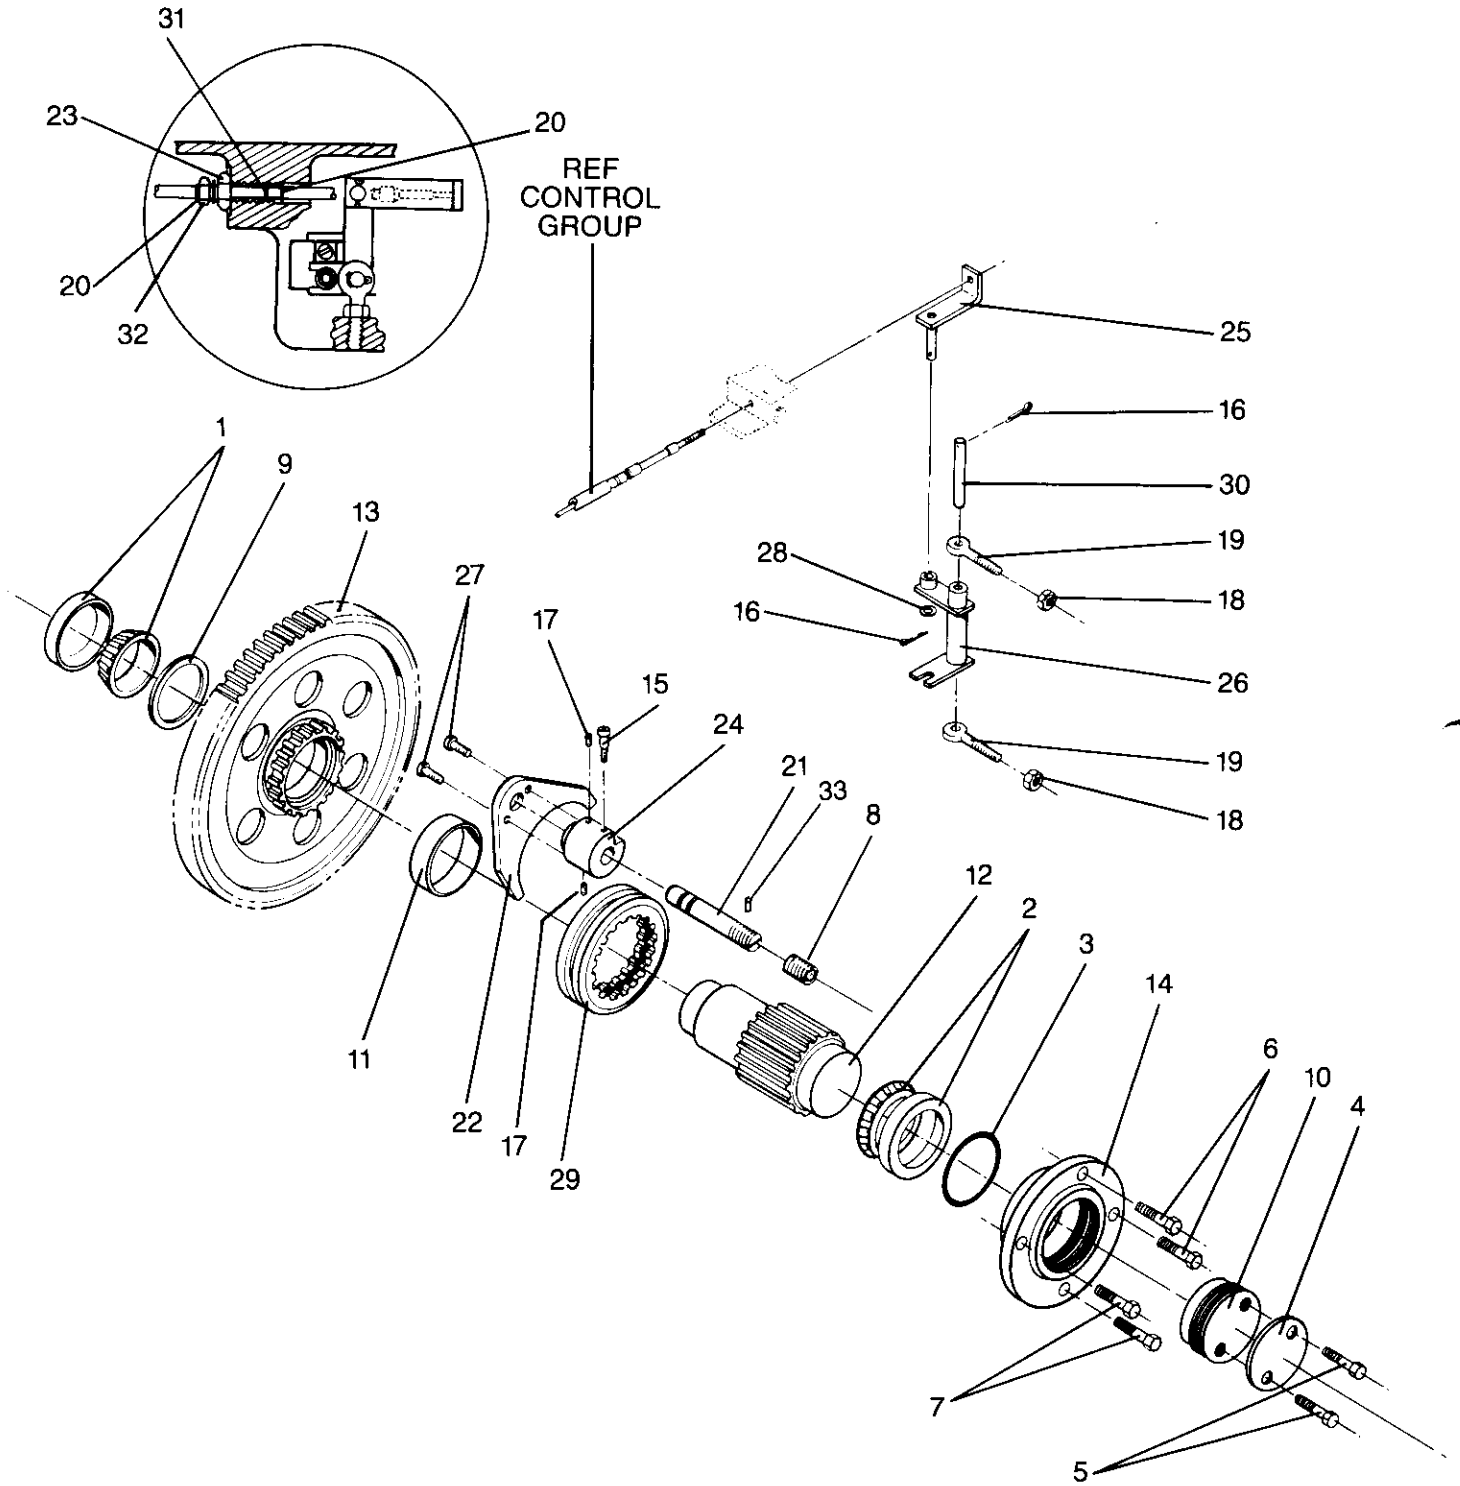

**IDLER SHAFT GROUP  
WITH FREESPOOL**

ITEM	PART NO.	DESCRIPTION	QTY.
1	69013	BEARING ASSEMBLY — INNER	1
2	69014	BEARING ASSEMBLY — OUTER	1
3	25880	O-RING	1
4	69655	LOCK PLATE	1
5	22729	CAPSCREW, HEX HEAD (1/2 - 13 x 3/4 G5)	2
6	22697	CAPSCREW, HEX HEAD (1/2 - 13 x 1 G5)	2
7	13421	CAPSCREW, HEX HEAD (1/2 - 13 x 2 G5)	2
8	27216	PLUG, SOCKET HEAD	1
9	11892	THRUST WASHER	1
10	69592	ADJUSTER	1
11	70349	BUSHING	1
12	69984	PINION, SECOND REDUCTION	1
13	69980	GEAR, FIRST REDUCTION	1
14	69974	CARRIER, IDLER SHAFT	1
15	70166	SHOULDER SCREW	1
16	70861	COTTER PIN	2
17	70136	BALL PLUNGER	2
18	18004	JAM NUT	2
19	70370	ROD END	2
20	69653	RETAINING RING	2
21	81921	SHIFT RAIL, INCLUDES ITEM 33	1
22	70348	YOKE	1
23	11059	JAM NUT	1
24	69263	SHIFT COLLAR	1
25	70652	CABLE CONNECTOR	1
26	69262	BELLCRANK WELDMENT	1
27	22693	CAPSCREW, HEX HEAD (3/8 - 16 x 3/4 G5)	2
28	11073	WASHER (1/2)	1
29	69979	COLLAR	1
30	69978	PIN	1
31	21119	O-RING	1
32	69963	CONTROL CABLE ADJUSTER	1
33	27475	NYLON PELLETT	1

# CABLE DRUM GROUP

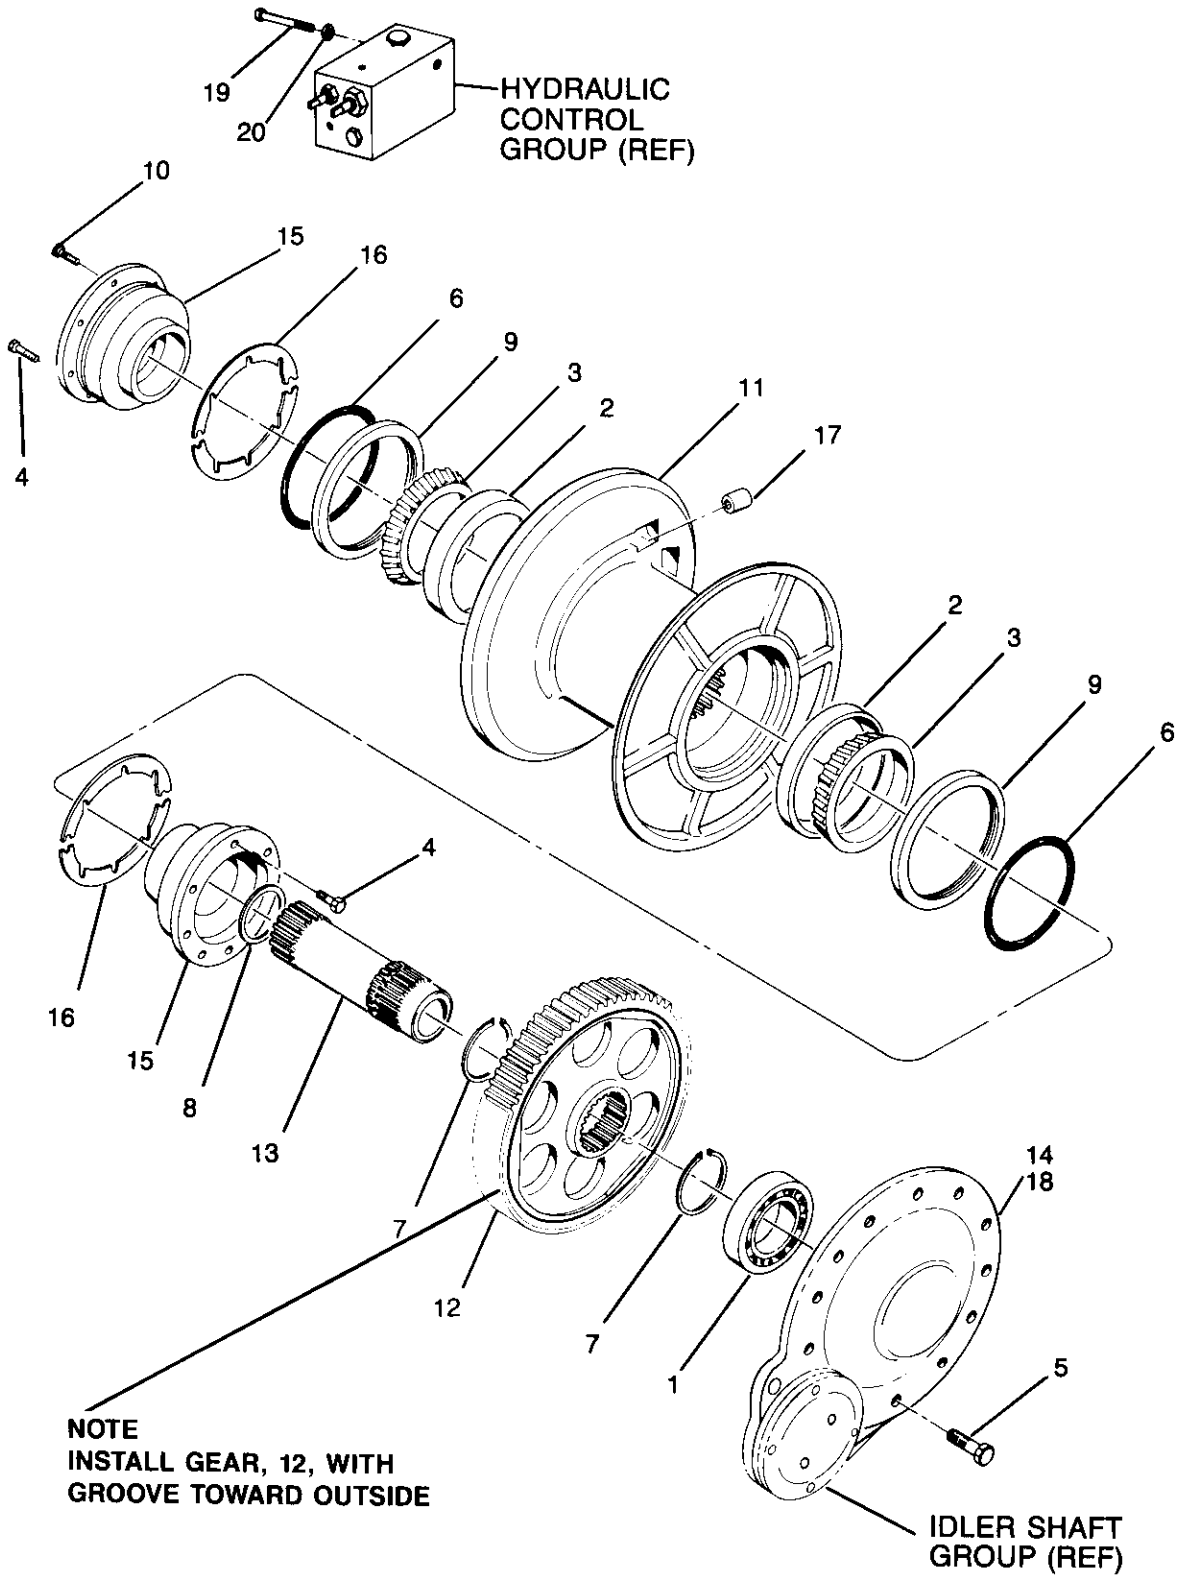

# CABLE DRUM GROUP







CABLE DRUM GROUP

ITEM	PART NO.	DESCRIPTION	QTY.
1	70070	BALL BEARING	1
2	70078	BEARING CUP	2
3	70079	BEARING CONE	2
4	27745	CAPSCREW, HEX HEAD (1/2 - 13 x 1 G5 - SS)	10
5	13938	CAPSCREW, HEX HEAD (1/2 - 13 x 1 1/4 G5)	11
6	70140	O-RING	2
7	70513	RETAINING RING	2
8	70164	RETAINING RING	1
9	70167	OIL SEAL	2
10	27743	CAPSCREW, SOCKET HEAD (1/2 - 13 x 1 G8 - SS)	1
11	69998	CABLE DRUM, STANDARD CAST IRON	1
	29019	CABLE DRUM, HEAVY DUTY CAST STEEL	1
12	68863	GEAR, 2ND REDUCTION	1
13	69988	SHAFT, 2ND REDUCTION	1
14	28954	BEARING CARRIER, COVER	1
15	27311	BEARING CARRIER, DRUM	2
16	70264	SHIM SET (1 pair ea., .005 in., .007 in., .020 in., .13 mm, .18 mm, .5 mm)	1-2
17	29425	FERRULE — 7/8 in. x (22 mm) WIRE ROPE	1
	29426	FERRULE — 1 in. x (26 mm) WIRE ROPE — STD.	1
18	—	NO GASKET, USE DOW RTV 732 OR EQUIVALENT	—
19	27744	CAPSCREW, HEX HEAD (1/2 - 13 x 5 G5 - SS)	1
20	11073	WASHER (1/2)	1

SS - SELF SEALING

**HYDRAULIC CONTROL GROUP  
LOW PTO**

**SECTION AA**

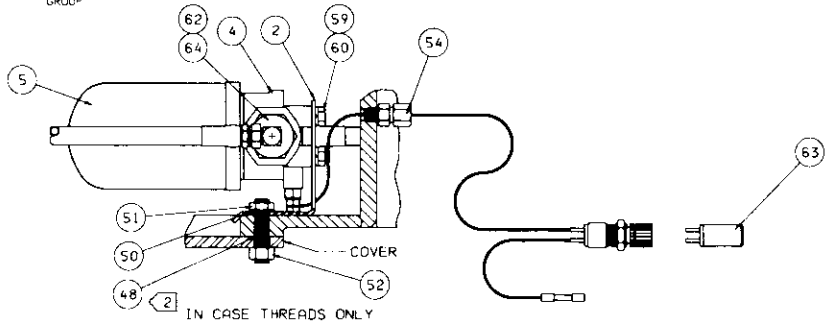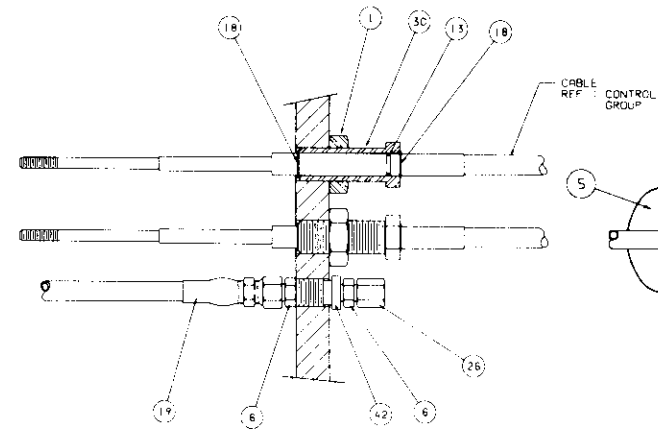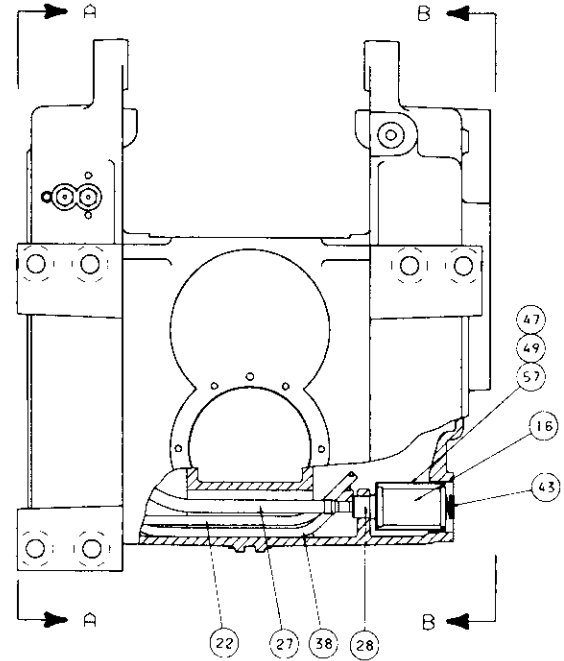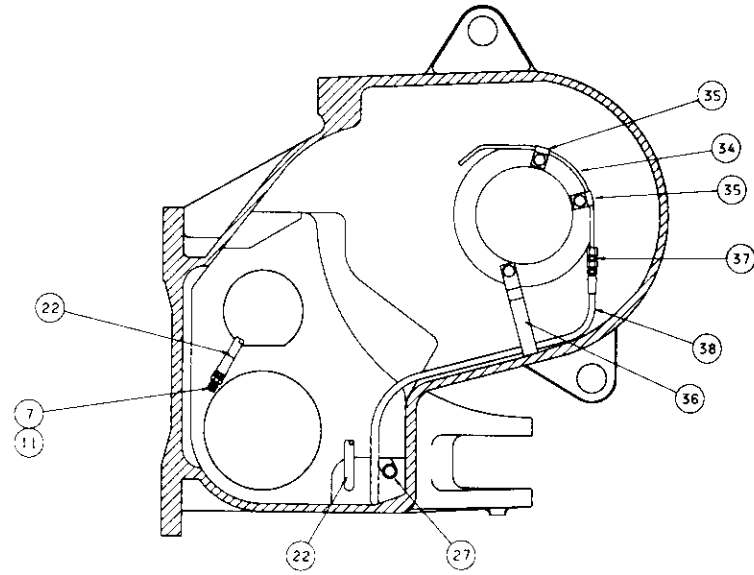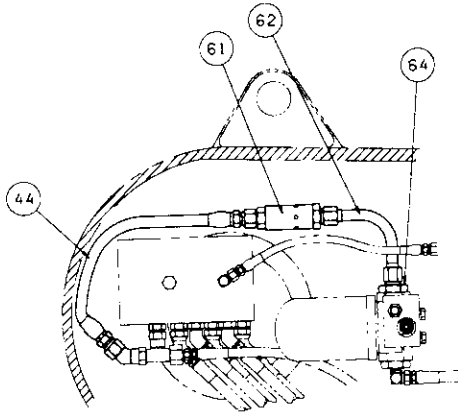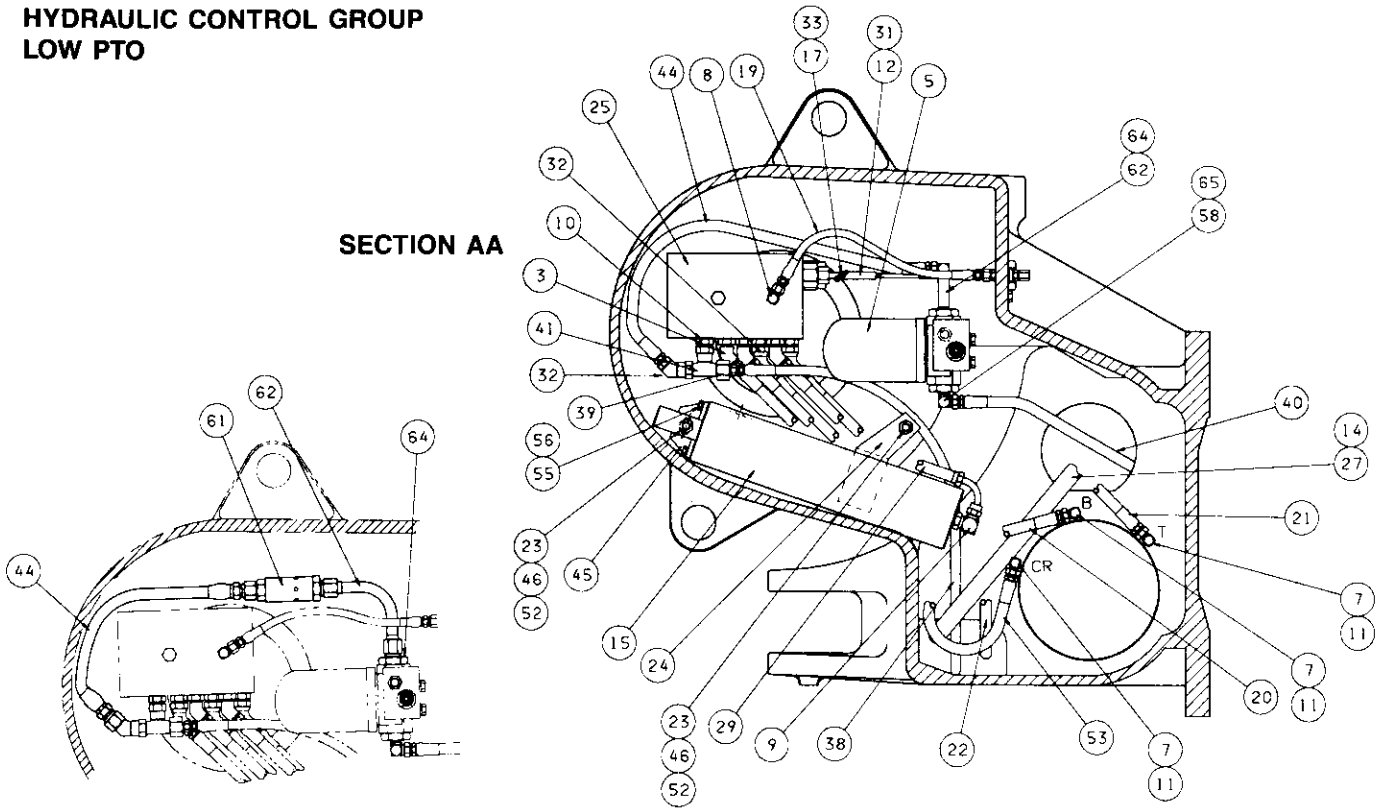


**HYDRAULIC CONTROL GROUP  
LOW PTO**

ITEM	PART NO.	DESCRIPTION	QTY.
1	11059	JAM NUT	2
2	27741	FILTER BRACKET	1
3	69605	ELBOW — 45° - 8 VALVE PORTS A, B	2
4	27390	FILTER HEAD	1
5	27389	FILTER ELEMENT	1
6	21219	ADAPTER 1/8 NPT - 4	2
7	70106	ADAPTER 1/4 NPT - 8	4
8	25131	ELBOW — 90° - 4 VALVE PORT G	1
9	<del>74068</del>	ELBOW — 90° - 8	1
10	70100	ADAPTER — 8 VALVE PORTS P, T, C1, C2	4
11	29046	ADAPTER — 90° - 8	4
12	69771	CLEVIS YOKE	2
13	21119	O-RING	2
14	30997	CLAMP, SUCTION HOSE	1
15	81959	ACCUMULATOR ASSEMBLY - SPRING TYPE (Ref. Pg. 24)	1
16	70189	SUCTION STRAINER	1
17	69313	CLEVIS PIN	2
18	69653	RETAINING RING	4
19	25750	HOSE — VALVE TO GAUGE PORT	1
20	70272	HOSE 24 in. (610 mm) VALVE TO B	1
21	70273	HOSE 32 in. (813 mm) VALVE TO T	1
22	70274	HOSE 46 in. (1168 mm) VALVE TO CL	1
23	11026	LOCKWASHER — 1/2	2
24	27848	ACCUMULATOR CLAMP BRACKET	1
24	27689	CONTROL VALVE ASSEMBLY (Ref. Pg. 23)	1
26	70182	CAP — 4	1
27	69046	SUCTION HOSE	1
28	69051	CONNECTOR	1
29	27982	HOSE 16 in. (406 mm) VALVE TO ACCUMULATOR	1
30	69963	ADJUSTER, CONTROL CABLE	2
31	13468	JAM NUT 1/4 - 28 NF	2
32	69516	ADAPTER — 45° - 8 VALVE PORTS P, T, C1, C2	4
33	69312	HITCH PIN	2
34	68996	LUBE TUBE	1

ITEM	PART NO.	DESCRIPTION	QTY.
35	68994	CLAMP, LUBE TUBE	2
36	68995	CLAMP, LUBE TUBE	1
37	25891	UNION — 4	1
38	25893	HOSE — 60 in. (1524 mm) LUBRICATION	1
39	27396	REDUCER — 8 - 4	1
40	27979	HOSE — .17 in (432 mm) PUMP TO FILTER	1
41	69330	TEE, SWIVEL — 8	1
42	27386	SLEEVE	1
43	26005	SPRING	1
44	27983	HOSE — 26 in. (660 mm) FILTER TO VALVE W/O FLO CTRL	1
	27979	HOSE — 17 in. (432 mm) FLO CTRL TO VALVE	1
45	27847	ACCUMULATOR MTG. ANGLE	1
46	27849	STUD 1/2 - 13 x 2 1/4	2
47	29020	SUCTION STRAINER SHIELD	1
48	27081	STUD 1/2 - 13 x 2 1/4	1
49	29021	SEAL RING 25 in. (6.4 mm) THICK	1
50	12781	LOCKWASHER, SHAKEPROOF — 1/2	1
51	23583	JAM NUT 1/2 - 13	1
52	11788	HEX NUT 1/2 - 13	5
53	27980	HOSE — 21 in. (533 mm) VALVE TO CR	1
54	61914	WIRING ASSEMBLY INCLUDES ITEM	1
55	11766	CAPSCREW HEX HEAD (5/16 - 18 x 7/8 G5)	2
56	11024	LOCKWASHER — 5/16	2
57	29023	SEAL RING .06 in. (1.5 mm) THICK	1-2
58	27397	ADAPTER — 1/2 NPT	1
59	22693	CAPSCREW, HEX HEAD (3/8 - 16 x 3/4 G5)	
60	18003	LOCKWASHER — 3/8	
61	29334	FLOW CONTROL VALVE*	
62	27392	ELBOW 90° XLG 1/2 NPT - 8 W/O FLO CTRL	1
	29335	TUBE ASSEMBLY — FLOW CONTROL	1
63	27091	INDICATOR LAMP	1
64	27397	ADAPTER — 1/2 NPT USED W/O FLO CTRL	1
	29352	ADAPTER — 8 USED WITH FLOW CONTROL	1
65	31347	ELBOW 90° 1/2 NPT - 8	1

\*FLOW CONTROL VALVE USED IN S/N 9200557 AND LATER.


# HYDRAULIC COMPONENTS

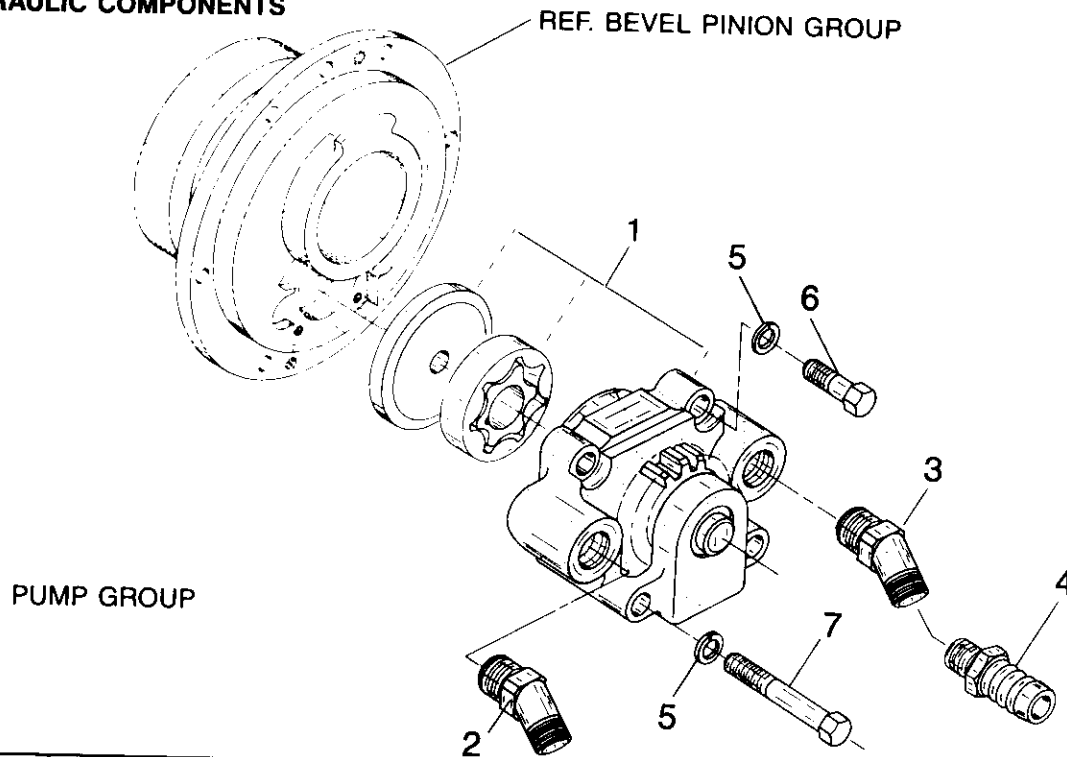

ITEM	PART NO.	DESCRIPTION	QTY
1	68772	PUMP ASSEMBLY	1
2	26752	ELBOW, 45° — 8 PRESSURE SIDE*	1
3	27991	ELBOW, 45° SUCTION — STD PTO	1
	69047	ELBOW, 45° 1/2 NPT ADAPTER — LOW PTO	1
4	69048	BARBED HOSE ADAPTER — LOW PTO	1
5	11015	LOCKWASHER — 1/4	4
6	27996	CAPSCREW, HEX HEAD 1/4 — 20 × 1 1/2 G8)	2
7	27997	CAPSCREW, HEX HEAD 1/4 — 20 × 3 G8	2

\*ITEMS 2, 3 & 4 SHOWN FOR COUNTERCLOCKWISE (CCW) BEVEL PINION ROTATION. REVERSE PORT LOCATION FOR CLOCKWISE (CW) BEVEL PINION ROTATION.

# ACCUMULATOR ASSEMBLY

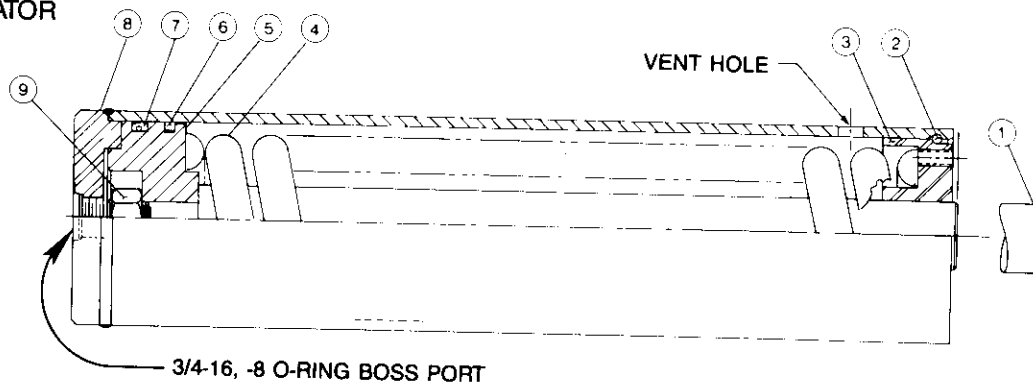

ITEM	PART NO.	DESCRIPTION	QTY
1	NSS	ROD	1
2	27836	RETAINING RING	1
3	NSS	ROD GUIDE	1
4	NSS	SPRING	1
5	NSS	PISTON	1
6	27833	CAST IRON PISTON RING	1
7	27832	SEAL ASSEMBLY	1
8	NSS	TUBE ASSEMBLY	1
9	NSS	NUT	1
—	62131	SEAL KIT (CONTAINS ITEMS 2, 6 & 7)	


NSS — Not Serviced Separately.

## **⚠ DANGER**

2,000 LB. (900 Kg) SPRING PRELOAD — USE PRESS FOR DISASSEMBLY PER SERVICE INSTRUCTIONS IN SERVICE BULLETIN 95. PROPERTY DAMAGE, SEVERE PERSONAL INJURY OR DEATH MAY RESULT IF ROD GUIDE REMOVAL IS ATTEMPTED WITHOUT A PRESS.




**CONTROL VALVE ASSEMBLY**  
**27689**

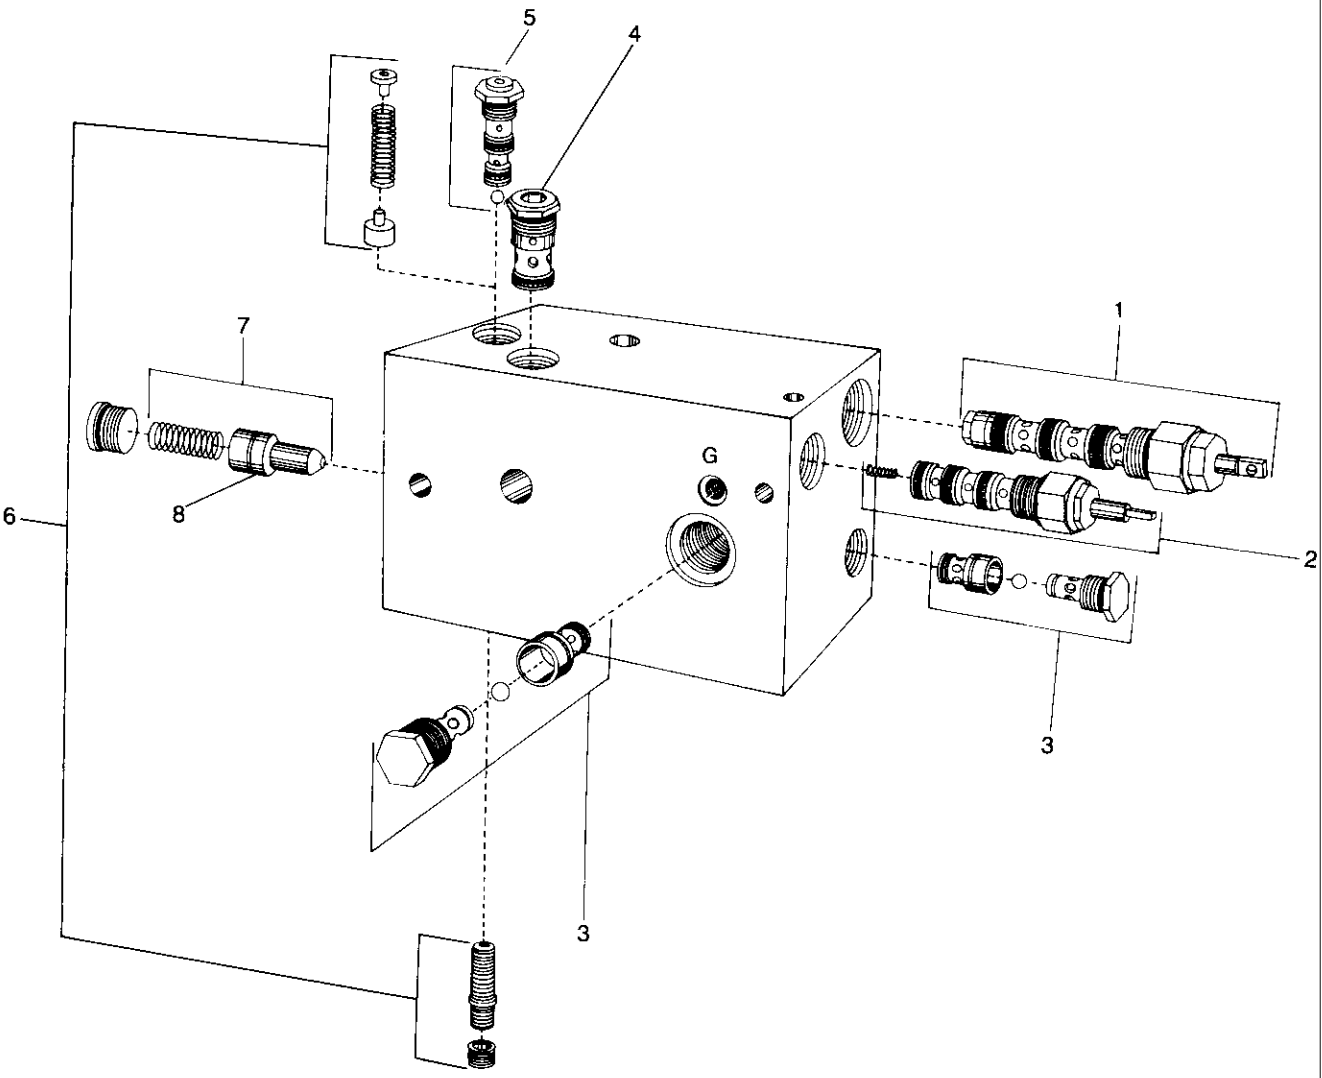


ITEM	PART NO.	DESCRIPTION	QTY.
1	26712	DIRECTIONAL CONTROL CARTRIDGE	1
	61838	SEAL KIT FOR ITEM 1	1
2	26713	BRAKE CONTROL CARTRIDGE	1
	61839	SEAL KIT FOR ITEM 2	1
3	26715	SHUTTLE VALVE ASSEMBLY	2
	61841	SEAL KIT FOR ITEM 3	2
4	27672	CHECK VALVE CARTRIDGE	1
	61840	SEAL KIT FOR ITEM 4	1
5	26716	DIFFERENTIAL UNLOADING PILOT VALVE CARTRIDGE	1
	61842	SEAL KIT FOR ITEM 5	1
6	62063	DIF. UNLOADING VALVE REPAIR KIT, INCLUDES ITEM 5	5
7	62062	UNLOADING POPPET ASSEMBLY	1
8	22454	O-RING	1

**CONTROL STAND**

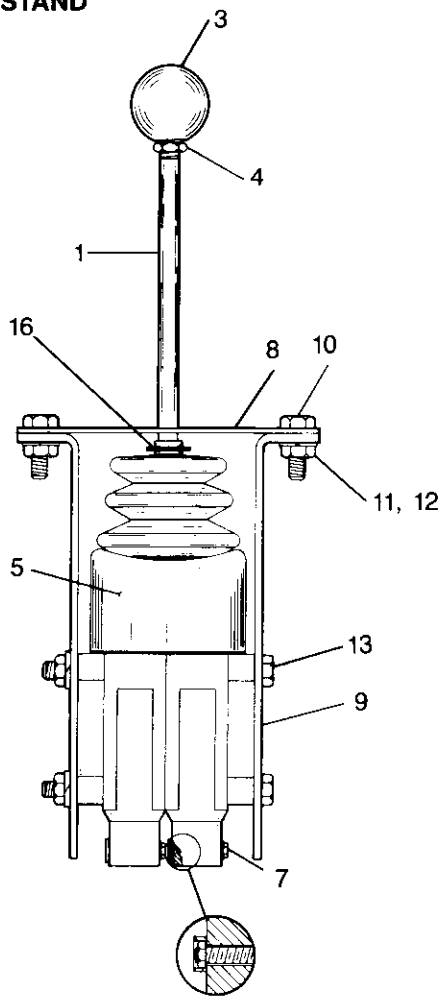


**CONTROL STAND KIT  
81965 WITHOUT FREESPOOL**

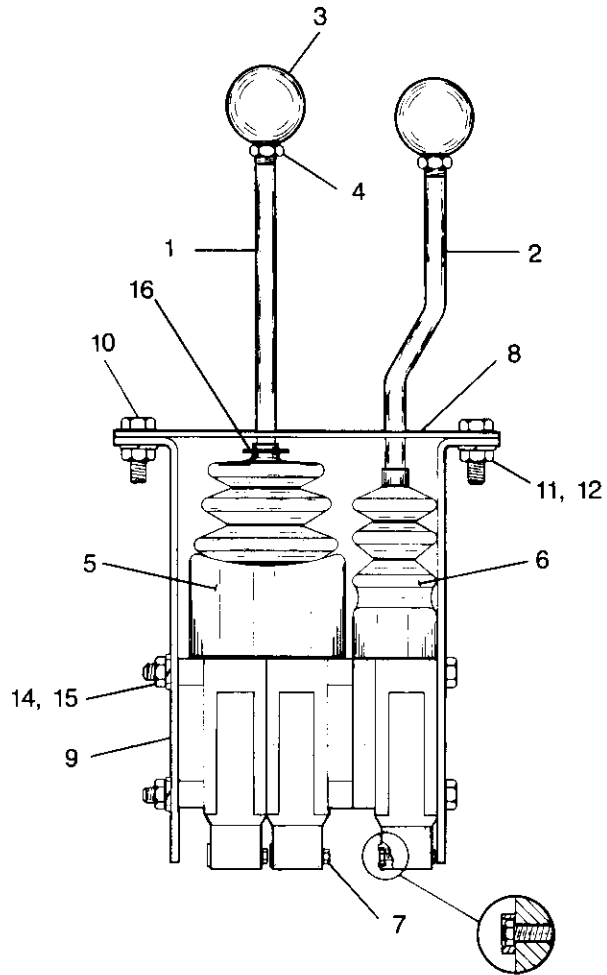

**CONTROL STAND KIT  
69667 WITH FREESPOOL**

ITEM	PART NO.	DESCRIPTION	QTY.
	81965	CONTROL STAND KIT WITHOUT FREESPOOL	
	69667	CONTROL STAND KIT WITH FREESPOOL	
1	27393	CONTROL ASSEMBLY — POWER SHIFT (CONTAINS CONTROL PLUS ITEMS 3, 4, 5 & 7)	1
2	69444	CONTROL ASSEMBLY — FREESPOOL (CONTAINS CONTROL PLUS ITEMS 3, 4, 6 & 7)	1
3	26696	KNOB	1-2
4	12793	JAM NUT	1-2
5	26697	BOOT — FOR ITEM 1	1
6	26698	BOOT — FOR ITEM 2	1
7	—	CAPSCREW — CABLE LOCK 10-32 UNF × 1 <sup>3</sup> / <sub>16</sub> " LG	2-3
8	69893	GATE PLATE, WITH F.S.	1
	27865	GATE PLATE, WITHOUT F.S.	1
9	69891	CONTROL STAND BRACKET	2
10	69643	CAPSCREW, HEX HEAD — 1/4 - 20 × 3/4 G5	4
11	23195	LOCKWASHER — 1/4	4
12	69645	NUT, HEX — 1/4 - 20	4
13	69642	CAPSCREW, HEX HEAD — 5/16 - 18 × 5/2 G5	3
	27878	CAPSCREW, HEX HEAD — 5/16 - 18 × 4 G5	3
14	69640	LOCKWASHER — 5/16	3
15	69644	NUT, HEX — 5/16 - 18	3
16	32489	TIE STRAP	1

# FAIRLEAD ASSEMBLY

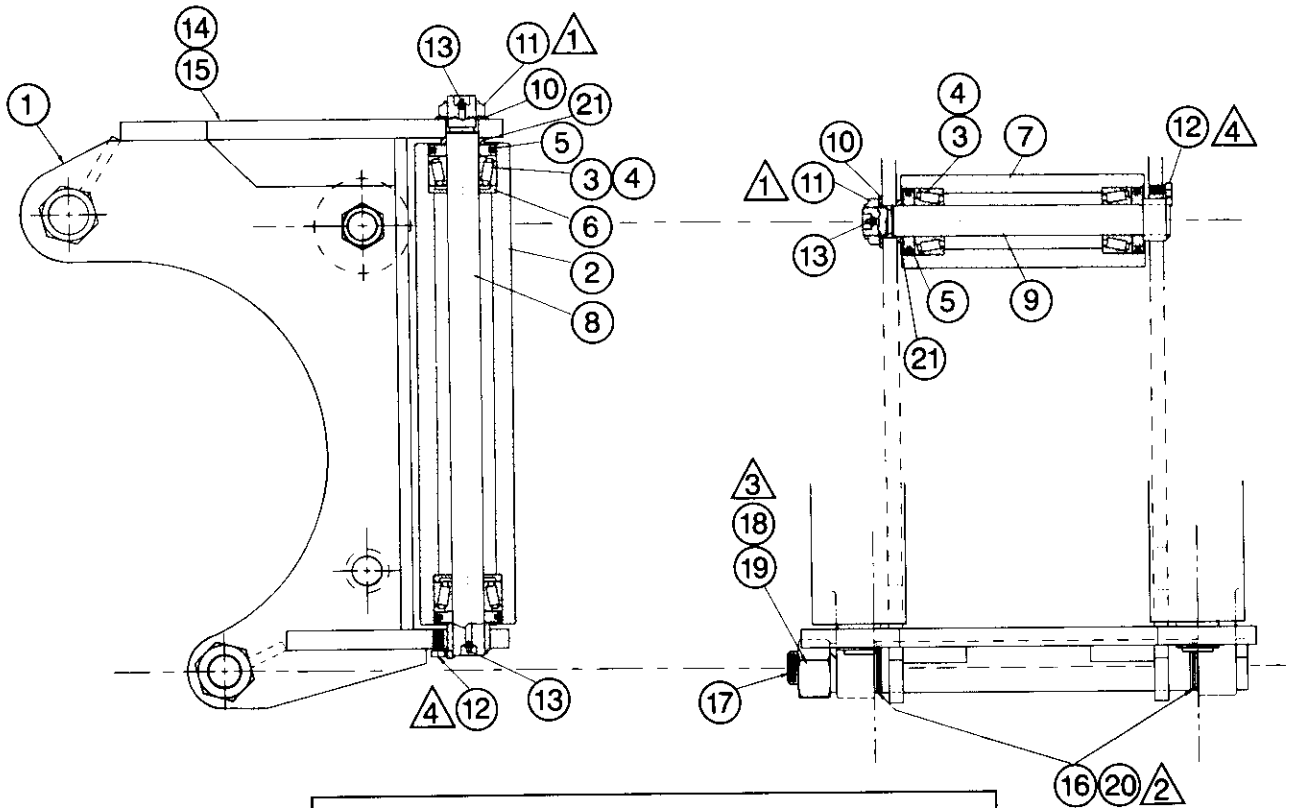

**NOTES:**

1 WHILE TURNING ROLLER, TIGHTEN NUT. WHEN ROLLER WILL TURN NO LONGER, BACK NUT OFF 1/4 TURN.

2 SHIM BOTH SIDES AS REQUIRED TO REDUCE END PLAY TO LESS THAN .030 in. (.8 mm).

3 TIGHTEN UNTIL WASHER IS FLATTENED THEN TURN 1 FLAT.

4 APPLY "LOCTITE 242" AND INSTALL WITH FLAT TANGENT TO HOLE PRIOR TO INSTALLATION OF SHAFT.

ITEM	PART NO.	DESCRIPTION	QUANTITY	
			3 ROLLER	4 ROLLER
	81970	3 ROLLER FAIRLEAD ASSEMBLY		
	81971	4 ROLLER FAIRLEAD ASSEMBLY		
1	27817	FAIRLEAD FRAME	1	1
2	36788	ROLLER — VERTICAL	2	2
3	70833	BEARING CONE	6	8
4	70834	BEARING CUP	6	8
5	70864	DUST GUARD ASSEMBLY	6	8
6	70865	GREASE RETAINER	4	4
7	27886	ROLLER — HORIZONTAL	1	2
8	36797	SHAFT — VERTICAL	2	2
9	27901	SHAFT — HORIZONTAL	1	2
10	70850	WASHER	3	4
11	70863	LOCK NUT	3	4
12	22729	CAPSCREW, HEXHEAD (1/2 NC x 3/4 GD5)	3	4
13	18047	GREASE FITTING	5	6
14	69534	NAMEPLATE	1	1
15	70053	DRIVE SCREW	4	4
16	24912	SHIM .030 in. (.8 mm)	4-AR	4-AR
17	28772	TIE BOLT	1	1
18	27666	LOCK WASHER	1	1
19	27655	NUT, HEX HEAD	1	1
20	25590	SHIM .125 in. (3.18 mm)	6-AR	6-AR
21	70880	SPACER	3	4